





 





 






























 



























Original	Recharge
 Power	 Power
 A1	 Shift + Smart / List
 V-Format	 Picture / Format
 Timer	 Sleep / Timer
 Mute	 Mute / Dimmer
 Tms	 AV / Input / RDS
 B2	 Shift + Display / Media
 F1	 Shift + 1
 Tv/Sat	 Smart / List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Recharge
 9	 9
 Tv/Radio	 TV/Radio /
 0/Zoom	 0
 0/Zoom	 Zoom / Size
 Recall	 Back / Return
 Find	 Shift + Red / Netflix /
 Vol-	 Vol-
 Page-	 CH- / Page-
 SAT	 Display / Media
 Rec	 Rec / Rec Mode
 Vol+	 Vol+
 Page+	 CH+ / Page+
 FAV	 Fav / Marker / PC
 Menu	 Menu / Home
 Up	 Up
 Info	 Info / Angle
 Left	 Left





Original		Recharge		Original		Recharge	
	OK		OK		Play Mode		Sound / Title
	Right		Right		USB		Shift + 8
	Exit		Exit / Cancel / Clear		Red		Red / Netflix / Search
	Down		Down		Audio		Audio / Lang I/II
	EPG		Guide / EPG / -/--		Green		Green / APP / Repeat
	Folder		Eject / Surround		Option		Setup / OPT /
	Stop		Stop / Hold		TXT		Text / Goto
	Pause		Pause / Step / Freeze		Yellow		Yellow / YouTube / Repeat
	Play		Play / Slow		Blue		Blue / Prime Video / Random
	I<<		I<< / Preset-				
	>>I		>>I / Preset+				
	<</Page-		<< / Tune-				
	<</Page-		Shift + CH- /				
	>>/Page+		>> / Tune+				
	>>/Page+		Shift + CH+ /				
	<I		Shift + I<< / Preset-				
	I>		Shift + >>I / Preset+				

