



Original	Recharge
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 I-II/Dual	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 P.Mode	 Picture / Format
 P.Size	 Zoom / Size
 Tv/DTV	 TV/Radio /
 D.Menu	 D.Menu / Top
 PIP	 Setup / OPT /
 Text/MIX	 Text / Goto
 Source	 AV / Input / RDS
 Menu	 Menu / Home

Original	Recharge
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter/OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 PRE-CH	 Back / Return
 Vol+	 Vol+
 CH.List	 Smart / List
 P+	 CH+ / Page+
 Vol-	 Vol-
 P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4





 

 

 



 

 

 

 







 

 



 
 


 


Original		Rechange		Original		Rechange	
	Power		Power		1		1
	Mute		Mute / Dimmer		2		2
	Play		Play / Slow		3		3
	Pause		Pause / Step / Freeze		4		4
	Stop		Stop / Hold		5		5
	<<		<< / Tune-		6		6
	>>		>> / Tune+		7		7
	Menu		Menu / Home		8		8
	Up		Up		9		9
	Info		Info / Angle		0		0
	Left		Left				
	Enter/OK		OK				
	Right		Right				
	Exit		Exit / Cancel / Clear				
	Down		Down				
	Vol+		Vol+				
	Vol-		Vol-				





Original	Recharge
 Cable	 Display / Media
 Power	 Power
 Power Cable	 Shift + Power
 Source	 AV / Input / RDS
 1	 1
 1 Cable	 Shift + 1
 2	 2
 2 Cable	 Shift + 2
 3	 3
 3 Cable	 Shift + 3
 4	 4
 4 Cable	 Shift + 4
 5	 5
 5 Cable	 Shift + 5
 6	 6
 6 Cable	 Shift + 6
 7	 7

Original	Recharge
 7 Cable	 Shift + 7
 8	 8
 8 Cable	 Shift + 8
 9	 9
 9 Cable	 Shift + 9
 0	 0
 0 Cable	 Fav / Marker / PC
 PRE-CH	 Back / Return
 D.Menu	 D.Menu / Top
 HDMI	 Shift + 0
 <<	 << / Tune-
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Vol+	 Vol+
 P+	 CH+ / Page+



