


 


 
 





 



 



 
 



 



 

 

 


 


 


 
 

 



 








Original		Rechange		Original		Rechange	
	Power		Power		Yellow		Yellow
	Play		Play		Index		List
	Pause		Pause		Blue		Blue
	<<		<<		CH+		Ch +
	>>		>>		CH-		Ch -
	I<<		I<<		Input		AV
	>>I		>>I		Vol+		Vol +
	Stop		Stop		Vol-		Vol -
	Rec		Rec		Mute		Mute
	Tv/TXT		Text		Menu		Menu
	Cancel		Shift + Exit		Exit		Exit
	Hold		Options		DVB		Smart
	Reveal		D. Menu		Up		Up
	Size		3D		Down		Down
	Red		Red		Right		Right
	Green		Green		Left		Left
	Subpage		Eject		OK		Ok



