





















 

 

 

















Original	Recharge	Original	Recharge
	Power		Power
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Find		Shift + Red / Netflix / Search
	Home		Menu / Home
	Adjust		Smart / List
	Up		Up
	CH-/I<		CH- / Page-
	Left		Left





	Original	Recharge	Original	Recharge
	8	 8		
	9	 9		
	Subtitle	 Subtitle / EQ		
	Format	 Picture / Format		
	0	 0		
	Text	 Text / Goto		
	Info	 Info / Angle		

