












 

 















 







 



















 












Original	Recharge	Original	Recharge
 Power	 Power	 Menu/Set	 MENU
 Mute	 MUTE	 V.Size	 V-FOR
 Tv/Video	 SRC	 MTS	 MEDIA
 Sleep	 VOD	 Sound	 Audio
 ◆ Bright	 -/-- / EPG	 Picture	 Subt.
 PIP	 WIDE	 1	 1
 Exit	 EXIT	 2	 2
 Text	 TEXT	 3	 3
 Pre PG	 P/C / FAV	 4	 4
 Up	 UP	 5	 5
 Down	 DOWN	 6	 6
 Right	 RIGHT	 7	 7
 Left	 LEFT	 8	 8
 PG+	 CH +	 9	 9
 PG-	 CH -	 0	 0
 Vol+	 VOL +	 Time	 TV/R
 Vol-	 VOL -	 Still	 OPT+



