 




 

 

 



 



 

 


 
 

 

 





 

 
 
 




Original	Recharge
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Back
 Text	 Text
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Sleep	 Sleep

Original	Recharge
 Audio	 Dual
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Source	 AV
 Display	 Info
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Menu	 Menu





Original	Recharge	Original	Recharge
Exit	Exit	Timeshift	Options
Subtitle	Subt	Tv/Radio	TV/R
Index	List		
Size	Format		
Reveal	D. Menu		
Play/Hold	Play		
Pause	Pause		
I<</Cancel	I<<		
>>I/Subpage	>>I		
Stop	Stop		
Rec	Rec		
FAV	Pre Ch		
<</FAV-	<<		
>>/FAV+	>>		
Mix	Smart		
EPG	Guide		
Media	Media		

