 

 


 



 









 


 
 
 

 




 

 






	Original	Recharge		Original	Recharge
	Start/Stop				Play
	Photo				Pause
	Display				Stop
	Self Timer				
	Zero Memory				
	Date/Time				
	W				
	T				
	Photo Search				
	A.DUB				
	I>/Slow				
	X2				
	>>				
	<<				
	<  /-				
	F.ADV				
	>/+	