
 
















 





 











Original		Rechange		Original		Rechange	
	Power		Power		P:P		Pre Ch
	Mute		Mute		EPG		Guide
	HDMI		AV		Vol+		Vol +
	FAV		Shift + Pre Ch		Vol-		Vol -
	Tv/Radio		TV/R		CH+		Ch +
	1		1		CH-		Ch -
	2		2		Info		Info
	3		3		Exit		Exit
	4		4		Menu		Menu
	5		5		Back		Back
	6		6		Up		Up
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0		0		OK		Ok
	Media		Media		Rec		Rec
	LIB		Smart		Play		Play





Original	Recharge	Original	Recharge
 Stop	 Stop		
 <<	 <<		
 Pause	 Pause		
 >>	 >>		
 Text	 Text		
 Subt.	 Subt		
 Audio	 Dual		
 Opt.	 Options		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

