



 
 

 









 



 











 


 












 


 
 






 
 


 
 



 


 
 

 



 
 

 

 
 
 

 
 

 




 
 


 

 
 
 
 
 
 
 

 
 
 
 
 




Original	Rechange	Original	Rechange
 Power	 Power	 Menu	 Menu
 Mute	 Mute	 EPG	 Guide
 1	 1	 Exit	 Exit
 2	 2	 Up / CH + / I<<	 Up
 3	 3	 Down / CH - / >>I	 Down
 4	 4	 Right / Vol +	 Right
 5	 5	 Left / Vol -	 Left
 6	 6	 OK	 Ok
 7	 7	 Up / CH + / I<<	 I<<
 8	 8	 Down / CH - / >>I	 >>I
 9	 9	 Up / CH + / I<<	 Ch +
 0	 0	 Down / CH - / >>I	 Ch -
 FAV	 Shift + Pre Ch	 Left / Vol -	 Vol -
 Recall	 Pre Ch	 Right / Vol +	 Vol +
 Game	 Media	 Red / Zoom	 Red
 Auto	 Smart	 Green / Lan/Audio	 Green
 Info	 Info	 Yellow /	 Yellow

Original	Rechange	Original	Rechange
 MUTE	 MUTE	 TV	 AUX
 MUTE	 MUTE	 DVD	 REC MODE
 1	 1	 SAT	 PLAY MODE
 2	 2	 AUX	 II
 3	 3	 SOUND	 ■
 4	 4	 AD	 ●
 5	 5	 SETTINGS	 <<<
 6	 6	 OPT	 <<
 7	 7	 ECO	 >>
 8	 8	 3D	 ▲
 9	 9	 TIMER	 ▼
 0	 0	 AV	 OK
 FAV	 FAV	 TOP MENU	 MENU
 Recall	 PRE-CH	 DISPLAY	 INFO
 GAME	 MEDIA	 CLEAR	 EXIT
 AUTO	 SMART	 RETURN	 BACK
 INFO	 INFO	 HOME	 SMART
		 APP	 MEDIA
		 +	 +
		 -	 -
		 1	 2
		 2	 3
		 3	 4
		 4	 5
		 5	 6
		 6	 7
		 7	 8
		 8	 9
		 9	 0
		 0	 PRE-CH
		 GUIDE	 FAV
		 A	 PRE-CH
		 B	 A
		 C	 B
		 D	 C
		 Mandis SHOP	 Mandis SHOP
		 www.mandis.tv	 www.mandis.tv



Play/Pause

