 



 

 

 





 














Original	Recharge	Original	Recharge
 AV/Input	 AV / Input / RDS	 Return	 Back / Return
 Power	 Power	 Rec	 Rec / Rec Mode
 Open/Close	 Eject / Surround	 Marker	 Fav / Marker / PC
 DVD	 Shift + 2	 Stop	 Stop / Hold
 HDD	 Shift + 7	 Play	 Play / Slow
 Audio	 Audio / Lang I/II	 Pause/Step	 Pause / Step / Freeze
 Title	 Sound / Title	 I<< Skip	 I<< / Preset-
 Display	 Display / Media	 << Scan	 << / Tune-
 Home	 Shift + Menu /	 Scan >>	 >> / Tune+
 Menu/List	 Menu / Home	 >>I Skip	 >>I / Preset+
 Up	 Up	 Red/FAV	 Red / Netflix / Search
 PR/CH+	 CH+ / Page+	 Green/Repeat	 Green / APP / Repeat
 Left	 Left	 Yellow/Subtitle	 Yellow / YouTube / Repeat
 Enter	 OK	 Blue	 Blue / Prime Video / Random
 Right	 Right	 Text	 Text / Goto
 Down	 Down	 EPG	 Guide / EPG / -/-
 PR/CH-	 CH- / Page-	 Timeshift	 Sleep / Timer





Original		Recharge	
	Clear		Exit / Cancel / Clear
	Power Tv	+	Shift + Power
	1		1
	2		2
	3		3
	PR/CH+ Tv	+	Shift + CH+ /
	4		4
	5		5
	6		6
	PR/CH- Tv	+	Shift + CH- /
	7		7
	8		8
	9		9
	Vol+ Tv		Vol+
	Tv/DVD		Tv/Radio /
	0		0
	Vol- Tv		Vol-

Original		Recharge	
	AV Input Tv	+	Shift + Eject / Surround

