



 




 


 
 
 
 
 


 
 
 


 


 
 
 
 
 
 
 


 
 
 

 
 
 

 
 
 

 
 
 


 
 




 
 

 
 








Original		Rechange		Original		Rechange	
	Power		Power		CH+		Ch +
	Cable		AV		CH-		Ch -
	1		1		Home		Smart
	2		2		Bach		Back
	3		3		Exit		Exit
	4		4		Guide		Guide
	5		5		[::]		TV/R
	6		6		Up		Up
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0		0		OK		Ok
	List		List		Mouse Up		>>
	Info		Info		Mouse Down		<<
	Vol+		Vol +		3D		3D
	Vol-		Vol -		Micro		Dual
	Mute		Mute		*		Menu





Original		Rechange		Original		Rechange	
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

