



Original	Rechange
Open/Close	Eject / Surround
AUX Power	Shift + Power
Power	Power
Tuner	Shift + 6
USB	Shift + 8
CD	Shift + 3
AUX1	Shift + 1
AUX2	Shift + 2
AUX3	Shift + 4
Program	TV/Radio /
Random	Blue / Prime Video / Random
Random AUX	Display / Media
Time/Info	Shift + Sleep / Timer
Tone	Sound / Title
Repeat	Green / APP / Repeat
Repeat AUX	Shift + Green / APP /
Timer	Sleep / Timer

Original	Rechange
Setup	Setup / OPT /
A-B	Yellow / YouTube / Repeat
Mute	Mute / Dimmer
Vol+	Vol+
Enter	OK
Vol-	Vol-
Folder/Cursor Down	Down
Folder/Cursor Down AUX	Shift + Down
Folder/Cursor Up	Up
Folder/Cursor Up AUX	Shift + Up
Pause	Pause / Step / Freeze
Pause AUX	Shift + Pause / Step /
I<<	I<< / Preset-
I<< AUX	Shift + I<< / Preset-
Play	Play / Slow
Play AUX	Shift + Play /
>>I	>>I / Preset+







Original	Recharge
>> I AUX	+ Shift + >> / Preset+
<<	<< / Tune-
<< AUX	+ Shift + << /
Stop	Stop / Hold
Stop AUX	+ Shift + Stop /
>>	>> / Tune+
>> AUX	+ Shift + >> /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Menu AUX	Menu / Home

Original	Recharge
0	0
Select AUX	+ Shift + 7
SPKR A	CH+ / Page+
SPKR B	CH- / Page-
BI-AMP	Smart / List
Dimmer	+ Shift + Mute / Dimmer

















Original	Rechange
 Open/Close	 Eject / Surround
 AUX Power	 Shift + Power
 Power	 Power
 Display	 Display / Media
 Program USB	 TV/Radio /
 Random USB	 Shift + Smart / List
 Time/Info USB	 Info / Angle
 Tone	 Sound / Title
 Repeat USB	 Green / APP / Repeat
 Timer	 Sleep / Timer
 Setup	 Setup / OPT /
 A-B USB	 Yellow / YouTube / Repeat
 Tuning Up	 CH+ / Page+
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 Tuning Down	 CH- / Page-
 Enter	 OK

Original	Rechange
 Vol-	 Vol-
 Folder/Cursor Down	 Down
 Folder/Cursor Down USB	 Shift + Down
 Folder/Cursor Up	 Up
 Folder/Cursor Up USB	 Shift + Up
 Pause USB	 Pause / Step / Freeze
 I<<	 I<< / Preset-
 I<< USB	 Shift + I<< / Preset-
 Play USB	 Play / Slow
 >>I	 >>I / Preset+
 >>I USB	 Shift + >>I / Preset+
 << USB	 << / Tune-
 Stop USB	 Stop / Hold
 >> USB	 >> / Tune+
 1	 1
 1 USB	 Shift + 1
 2	 2





Original	Recharge
 2 USB	 +  Shift + 2
 3	 3
 3 USB	 +  Shift + 3
 4	 4
 4 USB	 +  Shift + 4
 5	 5
 5 USB	 +  Shift + 5
 6	 6
 6 USB	 +  Shift + 6
 7	 7
 7 USB	 +  Shift + 7
 8	 8
 8 USB	 +  Shift + 8
 9	 9
 9 USB	 +  Shift + 9
 0	 0
 0 USB	 +  Shift + 0

Original	Recharge
 SPKR A	 +  Shift + CH+ /
 SPKR B	 +  Shift + CH- /
 BI-AMP	 Smart / List
 Dimmer	 +  Shift + Mute / Dimmer

