





 
 


 





 



 
 

 



 

 
 


 
 








Original	Recharge	Original	Recharge
 Power	 Power	 7	 7
 TV	 Smart	 8	 8
 VCR/AUX	 Media	 9	 9
 Sleep	 Sleep	 0	 0
 Tv/AV	 AV	 +10/-1-	 Guide
 Tuner/Band	 TV/R	 Cancel	 Exit
 DVD/CD	 Pre Ch	 I<< Skip	 I<<
 FL	 3D	 Skip >>I	 >>I
 Play Mode-Mix	 Shift + Play	 << Slow/Search	 <<
 Repeat	 Text	 Slow/Search >>	 >>
 Position	 Shift + Smart	 Stop	 Stop
 1	 1	 Pause	 Pause
 2	 2	 Play	 Play
 3	 3	 Top Menu/Direct Navigator	 Shift + Menu
 4	 4	 Menu/Play List	 Menu
 5	 5	 Display	 Info
 6	 6	 Return	 Back

Original	Recharge	Original	Recharge
 MUTE	 SHIFT	 TV	 DVD
 TV	 DVD	 SAT	 AUX
 VCR/AUX	 DVD	 PLAY MODE	 REC MODE
 SLEEP	 DVD	 PLAY	 PAUSE
 TV/AV	 DVD	 STOP	 STOP
 TUNER/BAND	 DVD	 I<<	 I<<
 DVD/CD	 DVD	 Skip >>I	 >>I
 FL	 DVD	 <<	 <<
 Play Mode-Mix	 DVD	 >>	 >>
 Repeat	 DVD	 STOP	 STOP
Position	DVD	PAUSE	PAUSE
1	DVD	PLAY	PLAY
2	DVD	Top Menu/Direct Navigator	Shift + Menu
3	DVD	Menu/Play List	Menu
4	DVD	Display	Info
5	DVD	Return	Back
6	DVD		



 








 












 
 
 
 
 

 
 
 





Original	Recharge
	Up
	Down
	Right
	Left
	Ok
	Vol +
	Vol -
	Mute
	Options
	Subt
	D. Menu
	Red
	Green
	Yellow
	List
	Format
	Eject

Original	Recharge
	Blue
	Dual





Original	Recharge	Original	Recharge
 Power	 Power		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 ≥10/-/11	 GUIDE Guide		
 Tv/AV	 AV AV		
 CH+	 Ch +		
 CH-	 Ch -		
 Tv Vol+	 Vol +		
 Tv Vol-	 Vol -		





Original	Recharge
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
±10/-/+	GUIDE Guide
SKIP >>	SKIP >>
SLOW/SEARCH <<	SLOW/SEARCH <<
SLOW/SEARCH <<<	SLOW/SEARCH <<<
SEARCH >>>	SEARCH >>>
Pause	Pause

Original	Recharge
Play	PLAY MODE Play
Stop	Stop

