


 




| Original   | Rechange  |
|--|---|
|  Standby    |  Power   |
|  Open/Close |  Eject   |
|  1          |  1       |
|  2          |  2       |
|  3          |  3       |
|  4          |  4       |
|  5          |  5       |
|  6          |  6       |
|  7          |  7       |
|  8          |  8       |
|  9         |  9      |
|  0        |  0     |
|  10+      |  Guide |
|  Time     |  AV    |
|  Subtitle |  Subt  |
|  Language |  Dual  |
|  Title    |  Smart |

| Original  | Rechange  |
|---|---|
|  Angle     |  Red           |
|  Vol+      |  Vol +         |
|  Vol-      |  Vol -         |
|  Slow      |  Format        |
|  Zoom      |  Shift + Eject |
|  Pause     |  Pause         |
|  Play      |  Play          |
|  Stop      |  Stop          |
|  <<        |  <<            |
|  >>        |  >>            |
|  I<<      |  I<<          |
|  >>I     |  >>I         |
|  Menu    |  Menu        |
|  Display |  Info        |
|  Setup   |  Options     |
|  Goto    |  Pre Ch      |
|  Up      |  Up          |



