




 



 

 


 
 

 

 

 



 

 

 

 



 










 
 







 
 

 

 








Original		Rechange		Original		Rechange	
	Power		Power		Vol-		Vol-
	Source		AV / Input / RDS		CH List		Smart / List
	1		1		CH-		CH- / Page-
	2		2		Content		Shift + Menu /
	3		3		Menu		Menu / Home
	4		4		Guide		Guide / EPG / -/-
	5		5		Tools		Setup / OPT /
	6		6		Info		Info / Angle
	7		7		Up		Up
	8		8		Left		Left
	9		9		Enter		OK
	TTX/MIX		Text / Goto		Right		Right
	0		0		Return		Shift + Back / Return
	PRE-CH		Back / Return		Down		Down
	Vol+		Vol+		Exit		Exit / Cancel / Clear
	Mute		Mute / Dimmer		Red/A		Red / Netflix / Search
	CH+		CH+ / Page+		Green/B		Green / APP / Repeat



