 


 
 






 

 



 




 
 


 





 


 



 






 
 

 
 








 
 
 










Original		Rechange		Original		Rechange	
	Power		Power		Recall		Back
	Mute		Mute		Menu		Menu
	1		1		Exit		Exit
	2		2		Text		Text
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		OK		Ok
	8		8		EPG		Guide
	9		9		Stop		Stop
	0		0		Play		Play
	Mark		Pre Ch		Pause		Pause
	Tv/Radio		TV/R		Rec		Rec
	Source		AV		<<		<<
	Info		Info		>>		>>
	Timeshift		D. Menu		I<<		I<<





Original		Rechange		Original		Rechange	
	>>I		>>I				
	Audio/Lang		Dual				
	Page Up		Smart				
	Page Down		Media				
	Vol+		Vol +				
	Vol-		Vol -				
	CH+		Ch +				
	CH-		Ch -				
	HDMI		3D				
	Zoom		Eject				
	Subtitle		Subt				
	Goto		Options				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

