



 







 

 
 


 


 
 


 
 
 



 

 


 


 
 



 
 






 


 









Original		Rechange		Original		Rechange	
	Power		Power		Recall		Back
	Mute		Mute		Vol +		Vol +
	DTV		Smart		Vol -		Vol -
	Radio		TV/R		P.Mode		Format
	USB		Options		S.Mode		Shift + Dual
	DVD		Media		FAV		Pre Ch
	1		1		CH +		Ch +
	2		2		CH -		Ch -
	3		3		Menu		Menu
	4		4		Exit		Exit
	5		5		Info		Info
	6		6		Source		AV
	7		7		Up		Up
	8		8		Down		Down
	9		9		Right		Right
	0		0		Left		Left
	Tv Guide		Guide		OK		Ok





Original		Recharge	
	Sleep		Sleep
	Aspect		3D
	Subtitle		Subt
	Text		Text
	Audio		Dual
	Text Hold	+	Shift + Text
	Zoom / Text		Eject
	Power / Display	+	Shift + Power
	Rec / DVD Menu		Rec
	I<<		I<<
	>>I		>>I
	Stop / Eject		Stop
	<<		<<
	>>		>>
	Play		Play
	Pause		Pause
	Rec List / DVD Setup		List

Original		Recharge	
	Red / Goto		Red
	Green / A-B		Green
	Yellow / Angle		Yellow
	Blue / Repeat		Blue

