


 
 
 





 



 
 

 
 



 

 
 





 
 
 


 


 
 



 




 





 










| Original | | Recharge | | Original | | Recharge | |
|---|----------|---|---------|---|--------|---|--------------|
|  | Power |  | Power |  | Recall |  | Back |
|  | Mute |  | Mute |  | Vol + |  | Vol + |
|  | DTV |  | Smart |  | Vol - |  | Vol - |
|  | Radio |  | TV/R |  | P.Mode |  | Format |
|  | USB |  | Options |  | S.Mode |  | Shift + Dual |
|  | DVD |  | Media |  | FAV |  | Pre Ch |
|  | 1 |  | 1 |  | CH + |  | Ch + |
|  | 2 |  | 2 |  | CH - |  | Ch - |
|  | 3 |  | 3 |  | Menu |  | Menu |
|  | 4 |  | 4 |  | Exit |  | Exit |
|  | 5 |  | 5 |  | Info |  | Info |
|  | 6 |  | 6 |  | Source |  | AV |
|  | 7 |  | 7 |  | Up |  | Up |
|  | 8 |  | 8 |  | Down |  | Down |
|  | 9 |  | 9 |  | Right |  | Right |
|  | 0 |  | 0 |  | Left |  | Left |
|  | Tv Guide |  | Guide |  | OK |  | Ok |





| Original | Rechange |
|----------------------|---------------|
| Sleep | Sleep |
| Aspect | 3D |
| Subtitle | Subt |
| Text | Text |
| Audio | Dual |
| Text Hold | Shift + Text |
| Zoom / Text | Eject |
| Power / Display | Shift + Power |
| Rec / DVD Menu | Rec |
| I<< | I<< |
| >>I | >>I |
| Stop / Eject | Stop |
| << | << |
| >> | >> |
| Play | Play |
| Pause | Pause |
| Rec List / DVD Setup | List |

| Original | Rechange |
|----------------|----------|
| Red / Goto | Red |
| Green / A-B | Green |
| Yellow / Angle | Yellow |
| Blue / Repeat | Blue |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

