

 













 



 



 
 

 





 







 
 

 





Original		Recharge		Original		Recharge	
	Power		Power		Vol+		Vol +
	HDMI ARC		3		Vol-		Vol -
	HDMI 1		1		Mute		Mute
	HDMI 2		2		Treble+		Ch +
	Optical		Up		Treble-		Ch -
	Bluetooth		Ok		V.Surr		Subt
	Music iLink		Down				
	Coax		Right				
	AUX		Left				
	Night Mode On		Red				
	Night Mode Off		Green				
	Audio Sync+		4				
	Audio Sync-		7				
	Auto Volume On		Yellow				
	Auto Volume		Blue				
	Bass+		6				
	Bass-		9				

