






 

 

 











 





 
 







Original	Rechange
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/AV	 0
 EPG/←	 Guide
 Media	 Media
 PIP/[]	 3D
 Text/Disc-M	 Text
 Menu	 Menu

Original	Rechange
 End	 Exit
 Info	 Info
 Up	 Up
 OK	 Ok
 Down	 Down
 Right	 Right
 Left	 Left
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue/Marker	 Blue
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +
 P-	 Ch -
 <<	 <<
 Play	 Play









 
 


 




 

 
 

 
 


 
 



 





 
 
 
 

 
 
 
 
 

 

 

 
 
 
 

 

 

 
 








Original		Rechange		Original		Rechange	
	>>		>>				
	Pause		Pause				
	Stop		Stop				
	Rec/HDMI		Rec				
	Sound		Dual				
	→[]←/Zoom		Format				
	O/Pop-Up-M		D. Menu				
	Audio		Subt				





 


 


Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/AV	 0
 EPG/←	 Guide
 Media	 Media
 PIP/[]	 3D
 Text/Disc-M	 Text
 Menu	 Menu
 End	 Exit

Original	Rechange
 Info	 Info
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 P+	 Ch +
 P-	 Ch -
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue/Marker	 Blue
 <<	 <<
 Play	 Play
 >>	 >>
 Pause	 Pause
 Stop	 Stop




 

 



 

 

 

 

 

 

 





 
 
 

 



 



 







 



 





 
 
 
 



 







Original	Recharge	Original	Recharge
 Rec	 Rec		
 →[]←/Zoom	 Format		
 O/Pop-Up-M	 D. Menu		

 

 

 





Original	Rechange	Original	Rechange
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/AV		0
	EPG/←		Guide
	Media		Media
	PIP/[]		3D
	Text/Disc-M		Text
	Menu		Menu
	End		Exit
	Info		Info
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue/Marker		Blue
	<<		<<
	Play		Play
	>>		>>
	Rec		Rec
	Pause		Pause
	Stop		Stop
	O/Pop-Up-M		D. Menu
	→[]←/Zoom		Format
	Up		Up
	OK		Ok
	Down		Down
	Right		Right





Original	Recharge	Original	Recharge
	Left		Left
	P+		Ch +
	P-		Ch -

