











 

























Original	Recharge
 Speakers TV Audio Bravia Sync	 Shift + Sound / Title
 Power AV Bravia Sync	 Shift + Power
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 ♥	 Fav / Marker / PC
 [≡]	 Text / Goto
 0	 0
 Enter	 Guide / EPG / -/--
 Red	 Red / Netflix / Search

Original	Recharge
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Top Menu	 D.Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Options	 Setup / OPT /
 Home/Menu	 Menu / Home
 Sound Mode	 Sound / Title
 I<</Preset-	 I<< / Preset-
 ←	 Shift + Left
 →	 Shift + Right
 >>I/Preset+	 >>I / Preset+













 





 
 


Original	Rechange
<</Tuning-	<< / Tune-
Play	Play / Slow
>>/Tuning+	>> / Tune+
[...]	Subtitle / EQ
Pause	Pause / Step / Freeze
Stop	Stop / Hold
Mute	Mute / Dimmer
Vol+	Vol+
Prog+	CH+ / Page+
Display	Display / Media
O)))	Audio / Lang I/II
Vol-	Vol-
Prog-	CH- / Page-
Sleep	Sleep / Timer

Original	Rechange






Original	Rechange
 Eject	 Eject / Surround
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 ♥	 Fav / Marker / PC
 0	 0
 Enter	 Guide / EPG / -/--
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Rechange
 Blue	 Blue / Prime Video / Random
 Top Menu	 D.Menu / Top
 Up	 Up
 Pop Up Menu	 Smart / List
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Options/Tools	 Setup / OPT /
 Function	 Info / Angle
 Home/Menu	 Menu / Home
 Sound Mode	 Sound / Title
 I<</Preset-	 I<< / Preset-
 ←	 Shift + Left
 →	 Shift + Right
 >>I/Preset+	 >>I / Preset+





Original		Rechange		Original	Rechange
	<</Tuning-		<< / Tune-		
	Play		Play / Slow		
	>>/Tuning+		>> / Tune+		
	[...]		Subtitle / EQ		
	Pause		Pause / Step / Freeze		
	Stop		Stop / Hold		
	Mute		Mute / Dimmer		
	Vol+		Vol+		
	Display		Display / Media		
	O)))		Audio / Lang I/II		
	Vol-		Vol-		
	Sleep		Sleep / Timer		







Original	Rechange
Speakers TV Audio Bravia Sync	Sound / Title
Power AV Bravia Sync	Shift + Power
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
♥ Fav / Marker / PC	Fav / Marker / PC
[≡] Text / Goto	Text / Goto
0	0
Red Red / Netflix / Search	Red / Netflix / Search
Green Green / APP / Repeat	Green / APP / Repeat

Original	Rechange
Yellow Yellow / YouTube / Repeat	Yellow / YouTube / Repeat
Blue Blue / Prime Video / Random	Blue / Prime Video / Random
Top Menu D.Menu / Top	D.Menu / Top
Up Up	Up
Left Left	Left
OK OK	OK
Right Right	Right
Return Back / Return	Back / Return
Down Down	Down
Home/Menu Menu / Home	Menu / Home
[...] Subtitle / EQ	Subtitle / EQ
Mute Mute / Dimmer	Mute / Dimmer
Vol+ Vol+	Vol+
Prog+ CH+ / Page+	CH+ / Page+
Display Display / Media	Display / Media
Vol- Vol-	Vol-
Prog- CH- / Page-	CH- / Page-





	Original	Recharge
	Sleep	 Sleep / Timer

	Original	Recharge

