










 





 






 

 

 









Original	Recharge
 Power	 Power
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 ([/])	 Zoom / Size
 *	 D.Menu / Top
 [<>]	 Picture / Format
 TV GUIDE	 Guide / EPG / -/-
 SEARCH	 SHIFT + Red / Netflix /
 SOURCES	 AV / Input / RDS
 SMART TV	 Smart / List
 HOME	 Menu / Home
 TV EXIT	 Exit / Cancel / Clear
 RED	 Red / Netflix / Search

Original	Recharge
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 i+ / Info	 Info / Angle
 OPTIONS	 Setup / OPT /
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 BACK	 Back / Return
 Down	 Down
 MULTIVIEW	 Display / Media
 Vol+	 Vol+
 LIST	 SHIFT + Smart / List
 CH+	 CH+ / Page+
 Vol-	 Vol-
 MUTE	 Mute / Dimmer





Original	Rechange	Original	Rechange
CH-	CH- / Page-		
1	1		
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
Subtitle	Subtitle / EQ		
0	0		
Text	Text / Goto		

