


 


 


 





 
 

 
 
 


 
 

 





 

 

 



 
 
 







	Original	Recharge	Original	Recharge
	Power			
	Sleep			
	Display			
	Play Mode / Tuning Mode			
	Repeat / FM Mode			
	Clear			
	EQ			
	Tuner Memory			
	Timer Menu			
	Up			
	Down			
	Right			
	Left			
	OK			
	Return			
	Tool Menu			
	>>I	