



Original	Recharge
Open/Close	Eject / Surround
Power	Power
VCR	Shift + 4
DVD	Shift + 2
TV / VCR	TV/Radio /
TV / View	Smart / List
2	2
4	4
1 / Tracking -	1
5	5
3 / Tracking +	3
6	6
7	7
8	8
9	9
Clear	Exit / Cancel / Clear
0	0

Original	Recharge
P.Scan	Blue / Prime Video / Random
Menu	Menu / Home
Setup	Setup / OPT /
Up	Up
PR+	CH+ / Page+
PR-	CH- / Page-
Down	Down
Left	Left
Right	Right
Enter	OK
Edit	Fav / Marker / PC
Display	Display / Media
I<<	I<< / Preset-
>>I	>>I / Preset+
Pause	Pause / Step / Freeze
Play	Play / Slow
<<	<< / Tune-







Original	Recharge
Open/Close	Eject / Surround
Power	Power
VCR	Shift + 4
DVD	Shift + 2
TV / VCR	TV/Radio /
TV / View	Smart / List
2	2
4	4
1 / Tracking -	1
5	5
3 / Tracking +	3
6	6
7	7
8	8
9	9
Clear	Exit / Cancel / Clear
0	0

Original	Recharge
P.Scan	Blue / Prime Video / Random
Menu	Menu / Home
Setup	Setup / OPT /
Up	Up
PR+	CH+ / Page+
PR-	CH- / Page-
Down	Down
Left	Left
Right	Right
Enter	OK
Edit	Fav / Marker / PC
Display	Display / Media
I<<	I<< / Preset-
>>I	>>I / Preset+
Pause	Pause / Step / Freeze
Play	Play / Slow
<<	<< / Tune-



