



Original		Rechange		Original		Rechange	
	Standby		Power		Select / OK		Ok
	Open / Close		Eject		Play		Play
	Red / Prog		Red		Pause		Pause
	Green / FAV		Green		Stop		Stop
	Yellow / Repeat		Yellow		I<< Skip / ↑		I<<
	Blue / A-B		Blue		Skip >>I / ↓		>>I
	Title / Guide		Guide		<< Search		<<
	Disp / Info		Info		Search >>		>>
	Zoom		Shift + Eject		Program +		Ch +
	Menu / List		Menu		Program -		Ch -
	Setup		Options		Wide		3D
	Return / Exit		Back		Mode		Media
	Search Mode		AV		Tv/Radio		TV/R
	Up		Up		Vol +		Vol +
	Down		Down		Vol -		Vol -
	Right		Right		Mute		Mute
	Left		Left		Subtitle		Subt





Original		Rechange		Original		Rechange	
	Audio		Dual				
	Angle / Text		Text				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	+10		Pre Ch				
	Clear		Exit				

