

 
 





 

 

 
 

 
 
 

 

 
 
 

 
 

 
 

 
 


 






 
 


 











 





Original	Recharge	Original	Recharge
 Power	 Power	 Time/Text	 Text
 1	 1	 Timer	 Shift + AV
 2	 2	 Tv/Video	 TV/R
 3	 3	 [...]	 Subt
 4	 4	 O)))	 Dual
 5	 5	 -/--/Clear	 Guide
 6	 6	 System Menu	 Menu
 7	 7	 Title List	 List
 8	 8	 Timer List	 Format
 9	 9	 Menu	 D. Menu
 0	 0	 Top Menu	 Shift + Menu
 PR+	 Ch +	 Eject	 Eject
 PR-	 Ch -	 Return	 Back
 Vol+	 Vol +	 Tools	 Options
 Vol-	 Vol -	 Enter	 Ok
 Input Select	 AV	 Up	 Up
 Display	 Info	 Down	 Down





Original	Recharge	Original	Recharge
	Right		Right
	Left		Left
	Play		Play
	Stop		Stop
	Pause		Pause
	>>/I>		>>
	<</<I		<<
	>>I		>>I
	I<<		I<<
	→		SHIFT +  Shift + Right
	←		SHIFT +  Shift + Left
	Visual Search		Blue
	Set		Pre Ch
	Sur		Sleep
	Rec		Rec
	Rec Pause		SHIFT +  Shift + Pause
	Rec Stop		SHIFT +  Shift + Stop
	Rec Mode		SHIFT +  Shift + Rec
	Synchro Rec		3D
	Chapter Mark		Red
	Mark Erase		SHIFT +  Shift + Eject
	Camera		Exit
	Progressive		Green
	[+]		Yellow
	Power Tv		SHIFT +  Shift + Power
	HDD		Smart
	DVD		Media
	1 Tv		SHIFT +  Shift + 1
	2 Tv		SHIFT +  Shift + 2
	3 Tv		SHIFT +  Shift + 3
	4 Tv		SHIFT +  Shift + 4
	5 Tv		SHIFT +  Shift + 5
	6 Tv		SHIFT +  Shift + 6
	7 Tv		SHIFT +  Shift + 7





Original	Rechange
 8 Tv	 +  Shift + 8
 9 Tv	 +  Shift + 9
 0 Tv	 +  Shift + 0
 -/--/Clear Tv	 +  Shift + Guide
 Prog + Tv	 +  Shift + Ch +
 Prog - Tv	 +  Shift + Ch -
 Tv/Video Tv	 +  Shift + TV/R

Original	Rechange

