





 
 



 


 
 
 



 
 


 
 



 


 

 

 







 




 






 
 






 


Original	Recharge
 Power	 Power
 Input	 AV
 Digital/Analog	 Options
 Tv/Radio	 TV/R
 Exit	 Exit
 Ext. Box Menu	 Menu
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [i+]/[?]	 Info

Original	Recharge
 [≡]	 Text
 Google Play	 Media
 Netflix	 Shift + Smart
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Action Menu	 D. Menu
 Guide	 Guide
 APPS	 Shift + Media
 Back	 Back
 TV	 3D
 Up	 Up
 Home	 Smart
 Down	 Down
 Right	 Right
 Left	 Left





Original		Rechange		Original		Rechange	
	OK		Ok		[...]		Subt
	Vol +		Vol +		Help		Format
	Vol -		Vol -				
	Mute		Mute				
	Prog +		Ch +				
	Prog -		Ch -				
	Recall		Pre Ch				
	Audio		Dual				
	<<		<<				
	Play		Play				
	>>		>>				
	I<<		I<<				
	Pause		Pause				
	>>I		>>I				
	Rec		Rec				
	Stop		Stop				
	Title List		List				

