 

 
 
 
 
 
 
 
 

 
 
 

 
 
 

 
 
 

 





 

 

 

 











Original		Recharge		Original		Recharge	
	Power		Power		Sound		Dual
	CD		1		Display		Info
	Bluetooth/Pairing		2		Prog		Sleep
	FM		3		Sleep/Timer		AV
	USB/Audio In		4		Clock/Scan		Media
	I<<		I<<				
	Play		Play				
	Pause		Pause				
	>>I		>>I				
	Stop		Stop				
	>>		Guide				
	Recall		Pre Ch				
	Album/Preset		Ch +				
	Album/Preset		Ch -				
	Vol+		Vol +				
	Vol-		Vol -				
	Mute		Mute				

