







 










 



 
 






 

 
 



 

 

 
 

 


 

 

 



 











Original	Recharge
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AV/Source	 AV / Input / RDS
 0	 0
 Exit/--	 Shift + Guide / EPG / --
 Exit/--	 Exit / Cancel / Clear
 P<P/SWAP	 Fav / Marker / PC
 Info	 Info / Angle
 PP	 Back / Return

Original	Recharge
 I/II	 Audio / Lang I/II
 Ok/Select	 OK
 Up	 Up
 Left	 Left
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 TV/DTV	 TV/Radio /
 CH+ / Page+	 CH+ / Page+
 Vol+	 Vol+
 CH-	 CH- / Page-
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Red/↑	 Shift + CH+ /
 Red/↑	 Red / Netflix / Search
 Green/↓	 Shift + CH- /
 Green/↓	 Green / APP / Repeat





Original	Recharge	Original	Recharge
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[≡]		Text / Goto
	[≡o]		Sleep / Timer
	[≡+]/[+]		Stop / Hold
	[≡x]/[· ·]		D.Menu / Top
	[/≡]/[*]		Setup / OPT /
	[≡♦]/[X]/Wide		Picture / Format
	[≡♦]/[X]/Wide		Zoom / Size
	[≡?]		Smart / List
	[≡i]/Guide		Guide / EPG / -/--

