



Original	Recharge	Original	Recharge
 Power	 Power	 Rec	 Rec
 Input D/A	 Smart	 I<<	 I<<
 Tv/Radio	 TV/R	 <<	 <<
 Input	 AV	 >>	 >>
 Bright-	 Shift + Left	 >>	 >>
 Bright+	 Shift + Right	 Menu	 Menu
 Simplink	 Media	 Back	 Back
 Text	 Text	 Exit	 Exit
 Ratio	 Format	 Info	 Info
 I-II	 Dual	 Guide	 Guide
 Red	 Red	 Up	 Up
 Green	 Green	 Down	 Down
 Yellow	 Yellow	 Right	 Right
 Blue	 Blue	 Left	 Left
 Stop	 Stop	 OK	 Ok
 Play	 Play	 FAV	 Pre Ch
 Pause	 Pause	 Vol+	 Vol +







 
 








 
 


 




 





Original		Recharge		Original		Recharge	
	Vol-		Vol -		Index/[≡i]		Shift + Info
	Mute		Mute		Time/[≡o]		D. Menu
	PR+		Ch +		Sleep		Sleep
	PR-		Ch -		Hold/[≡+]		Eject
	1		1		Reveal/[≡?]		3D
	2		2		Subtitle		Subt
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	List		List				
	Q.View		Options				
	Update/[≡x]		Shift + Back				



 
 

 



 


 
 

 



 




 















	Original	Rechange	Original	Rechange
	Power			4
	Stop			5
	Play			6
	Pause			7
	I<<			8
	>>I			9
	<<			0
	>>			
	Menu			
	Up			
	Down			
	OK			
	Right			
	Left			
	1			
	2			
	3			





	Original	Rechange	Original	Rechange
	Power			8
	Input			9
	Stop			0
	Play			
	Pause			
	Rec			
	<<			
	>>			
	PR+			
	PR-			
	1			
	2			
	3			
	4			
	5			
	6			
	7	