



Original	Rechange	Original	Rechange
 Power	 Power	 Yellow	 Yellow / YouTube / Repeat
 Source	 AV / Input / RDS	 Menu	 Menu / Home
 Picture	 Picture / Format	 0	 0
 Sound	 Sound / Title	 Exit	 Exit / Cancel / Clear
 Still	 Pause / Step / Freeze	 Blue	 Blue / Prime Video / Random
 Mute	 Mute / Dimmer	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 OK
 3	 3	 Right	 Right
 Red	 Red / Netflix / Search	 Down	 Down
 4	 4	 CH -	 CH- / Page-
 5	 5	 CH +	 CH+ / Page+
 6	 6	 Vol -	 Vol-
 Green	 Green / APP / Repeat	 Vol +	 Vol+
 7	 7	 Guide / Size	 Guide / EPG / -/--
 8	 8	 Index / Subtitle	 Subtitle / EQ
 9	 9	 Sleep	 Sleep / Timer





Original	Recharge
Text	GOTO TEXT Text / Goto
Sub Code FAV	PC FAV MARKER Fav / Marker / PC
Reveal TV	PROGRAM TV/RADIO /
Mix Comp	MEDIA DISPLAY Display / Media
Cancel Lang	LANG I/II Audio / Lang I/II
Cancel Lang	SHIFT + CLEAR EXIT Shift + Exit / Cancel / Clear
Info	ANGLE INFO Info / Angle
Recall	RETURN BACK Back / Return
Zoom	SIZE ZOOM Zoom / Size
I / II	SHIFT + LANG I/II AUDIO Shift + Audio / Lang I/II

Original	Recharge

