


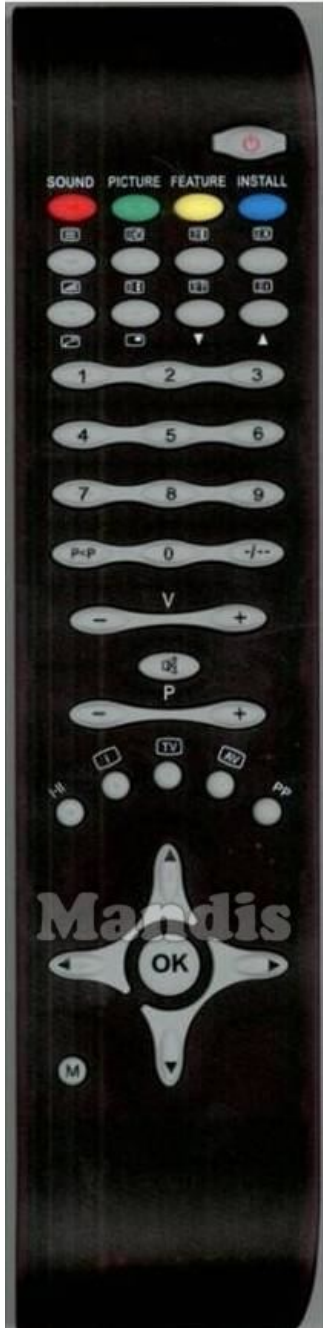


 
 
 



Original		Rechange		Original		Rechange	
	Power		Power		5		5
	Red/Sound		Red		6		6
	Green/Picture		Green		7		7
	Yellow/Feature		Yellow		8		8
	Blue/Install		Blue		9		9
	[≡]		Text		0		0
	[≡O]		Options		P<P		Pre Ch
	[≡+]		Format		-/--		Guide
	[≡X]		Smart		Vol+		Vol +
	[.≡]/[■]		Subt		Vol-		Vol -
	[≡◆]/[■]		Media		Mute		Mute
	[≡?]/↓		3D		P+		Ch +
	[≡i]/↑		List		P-		Ch -
	1		1		I-II		Dual
	2		2		[i]		Info
	3		3		TV		TV/R
	4		4		AV		AV





Original	Rechange	Original	Rechange
 PP	 Back		
 Up	 Up		
 Down	 Down		
 Right	 Right		
 Left	 Left		
 OK	 Ok		
 M	 Menu		

