 

 

 

 

 

 

 

 









 

 

 
 










Original		Rechange		Original		Rechange	
	Power		Power		Menu		Menu / Home
	Mute		Mute / Dimmer		Source		AV / Input / RDS
	1		1		Up		Up
	2		2		Left		Left
	3		3		Enter		OK
	4		4		Right		Right
	5		5		Down		Down
	6		6		Exit		Exit / Cancel / Clear
	7		7		Display		Display / Media
	8		8		Vol+		Vol+
	9		9		MTS		Smart / List
	DTV/ATV		Shift + TV/Radio / Program		CH+		CH+ / Page+
	0		0		Vol-		Vol-
	Recall		Back / Return		Aspect		Shift + Picture / Format
	P.Mode		Picture / Format		CH-		CH- / Page-
	S.Mode		Sound / Title		FAV/List		Fav / Marker / PC
	Sleep		Sleep / Timer		Media		Shift + Display / Media





Original	Recharge
 Freeze	 Pause / Step / Freeze
 Guide	 Guide / EPG / -/-
 <<	 << / Tune-
 >>	 >> / Tune+
 I<</Cancel	 I<< / Preset-
 >>I/Sub.Pg	 >>I / Preset+
 Stop/Index	 Stop / Hold
 Play/Pause/Timeshift	 Play / Slow
 Tv/Radio	 TV/Radio /
 Subtitle	 Subtitle / EQ
 Reveal	 Shift + Back / Return
 Size	 Zoom / Size
 Hold	 Shift + Stop /
 Text	 Text / Goto
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Recharge
 Cyan	 Blue / Prime Video / Random

