







 



 

 

 






 












 

 

 



 







 











 







Original		Rechange		Original		Rechange	
	Standby/On		Power		Text		Text / Goto
	Mute		Mute / Dimmer		Input Select		AV / Input / RDS
	Play		Play / Slow		Menu/Pop Menu		Menu / Home
	Pause		Pause / Step / Freeze		Up		Up
	Stop		Stop / Hold		[i+]		Info / Angle
	Rec		Rec / Rec Mode		Left		Left
	<<		<< / Tune-		OK		OK
	>>		>> / Tune+		Right		Right
	I<<		I<< / Preset-		Exit		Exit / Cancel / Clear
	>>I		>>I / Preset+		Down		Down
	Audio		Audio / Lang I/II		Return/Back		Back / Return
	Subtitle		Subtitle / EQ		Prog+		CH+ / Page+
	Open/Close		Eject / Surround		Display		Display / Media
	Timeshift		Sleep / Timer		Prog-		CH- / Page-
	Sat Link		TV/Radio /		1		1
	Top Menu		D.Menu / Top		2		2
	Setup		Setup / OPT /		3		3



