

	Original	Rechange		Original	Rechange
	Power		Power	Subtitle	Subtitle / EQ
	OK		OK	Settings	Setup / OPT /
	Up		Up	>>	>> / Preset+
	Down		Down	>>	>> / Tune+
	Right		Right	Play	Play / Slow
	Left		Left	AD / PIP	Sound / Title
	Back	Back / Return	<<	<<	<< / Preset-
	Vol +	Vol+	<<	<<	<< / Tune-
	Vol -	Vol-	Rec	Rec / Rec Mode	
	Home / Smart	Menu / Home	Pause	Pause / Step / Freeze	
	3D	+ Shift + 3	Text	Text / Goto	
	Mute	Mute / Dimmer	FAV	Fav / Marker / PC	
	P +	CH+ / Page+	Exit	Exit / Cancel / Clear	
	P -	CH- / Page-	Input	AV / Input / RDS	
	Ratio	Picture / Format	Blue	Blue / Prime Video / Random	
	List	Smart / List	Yellow	Yellow / YouTube / Repeat	
	Q.Menu	D.Menu / Top	Stop / Live TV	Stop / Hold	



Original	Recharge	Original	Recharge
AV Mode	 Shift + AV / Input / RDS	5	 5
Green	 Green / APP / Repeat	Q.View	 Shift + Display / Media
Red	 Red / Netflix / Search	4	 4
0	 0	Live Zoom	 Zoom / Size
AD	 Audio / Lang I/II	3	 3
TV / PC	 Shift + Fav / Marker / PC	2	 2
Search	 Shift + Red / Netflix /	1	 1
App	 Shift + Green / APP /	T.Opt	 Shift + Setup / OPT / Tools
TV / Radio	 TV/Radio /	Energy Saving	 Eject / Surround
Guide	 Guide / EPG / -/--	My APPS	 Shift + Smart / List
Info	 Info / Angle		
Recent	 Sleep / Timer		
9	 9		
8	 8		
7	 7		
Live Menu	 Display / Media		
6	 6		

