









 


 








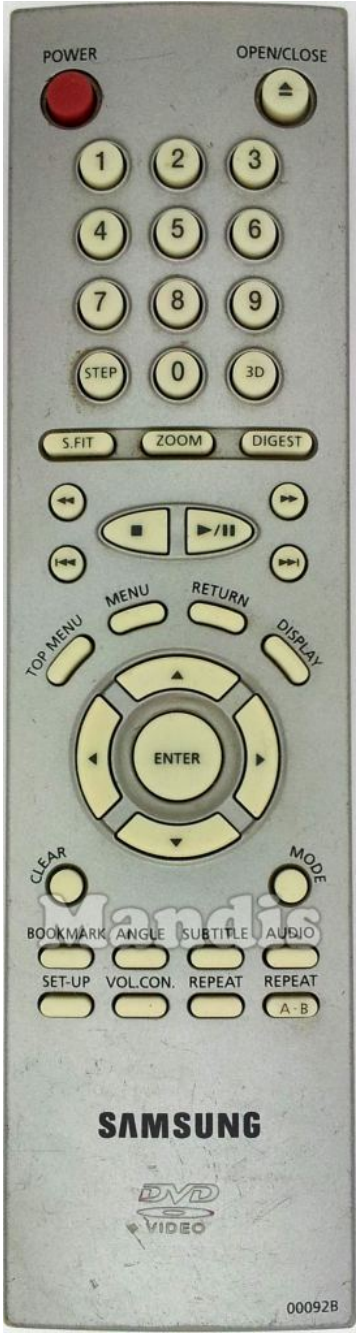


	Original	Recharge		Original	Recharge
	Power		Power		<<
	Open/Close		Eject		>>
	1		1		<<
	2		2		>>
	3		3		Stop
	4		4		Play
	5		5		Pause
	6		6		Top Menu
	7		7		Menu
	8		8		Return
	9		9		Display
	0		0		Clear
	Step		Format		Mode
	3D		3D		Up
	S.Fit		List		Down
	Zoom		Shift + Eject		Right
	Digest		TV/R		Left





Original		Rechange	
	Enter		Ok
	Bookmark		Guide
	Angle		Media
	Subtitle		Subt
	Audio		Dual
	Set-Up		Options
	Vol.Con		Green
	A-B Repeat		Blue
	Repeat		Text

Original		Rechange	

