
 
 








 
 
 




 

 


 
 


 
 
 
 

 





Original	Recharge
	Power
	SRC
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	EPG -/-- / EPG
	INFO
	MUTE
	VOL +
	VOL -

Original	Recharge
	Format
	CH +
	CH -
	Red (A)
	Green (B)
	Yellow (C)
	Blue (D)
	MENU
	MEDIA
	UP
	DOWN
	RIGHT
	LEFT
	OK
	BACK
	EXIT
	Audio



