

















 


 








 


 


 




 



 


 





	Original	Recharge		Original	Recharge
	Power		Power		Up
	Open/Close		Eject		Down
	DVD		Red		Right
	Tuner		Green		Left
	Video		Yellow		Enter
	TV/AUX		Blue		Vol +
	Sleep		Sleep		Vol -
	I<<		I<<		Mute
	<<		<<		Setup
	>>		>>		Pause/Step
	>>I		>>I		Menu/Return
	Play		Play		Goto Auto
	Stop		Stop		1
	SP.Setup		Media		2
	CH-Level		Guide		3
	SR.Mode		List		4
	Title		Info		5



