
 




Original	Rechange
	 Power
	 Fav / Marker / PC
	 Mute / Dimmer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Back / Return
	 0
	 Display / Media
	 I<< / Preset-
	 >>I / Preset+

Original	Rechange
	 Play / Slow
	 Stop / Hold
	 Pause / Step / Freeze
	 Up
	 Left
	 OK
	 Right
	 D.Menu / Top
	 Down
	 Menu / Home
	 Subtitle / EQ
	 Info / Angle
	 Zoom / Size
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Audio / Lang I/II

