


Original		Rechange		Original		Rechange	
	Power		Power		5		5
	Red/Sound ↑		Red		6		6
	Green/Picture/↓		Green		7		7
	Yellow/Feature		Yellow		8		8
	Blue/Install		Blue		9		9
	[≡]		Text		0		0
	[≡0]		Options		P<P		Pre Ch
	[≡+]		Subt		-/--		Shift + Guide
	[≡x]/[· ·]		Format		Vol+		Vol +
	[/≡]/[*]		Back		Vol-		Vol -
	[+](≡◆)/Wide		3D		Mute		Mute
	[≡?]/PC		Smart		P+		Ch +
	[≡i]/Guide		Guide		P-		Ch -
	1		1		I-II		Dual
	2		2		[i]/Info		Info
	3		3		TV/DTV		TV/R
	4		4		AV		AV

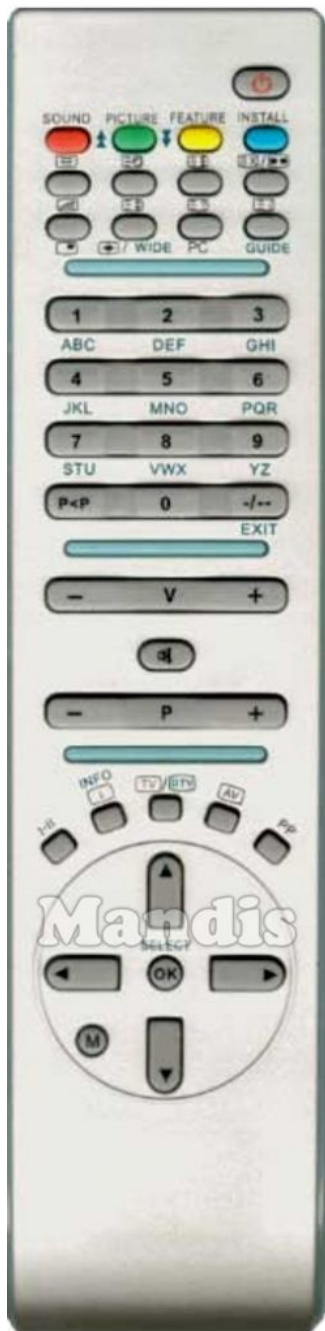



	Original	Recharge	Original	Recharge
	PP	MEDIA		Media
	Up			Up
	Down			Down
	Right			Right
	Left			Left
	OK/Select	OK		Ok
	M	TOP MENU MENU		Menu

