















Original		Rechange		Original		Rechange	
	P100		Display / Media		AV		AV / Input / RDS
	Power		Power		0		0
	REV		<< / Tune-		-/--		Guide / EPG / -/--
	Doub		Audio / Lang I/II		P+		CH+ / Page+
	1		1		Up		Up
	2		2		Mute		Mute / Dimmer
	3		3		TV/TXT		TV/Radio /
	Hold		Stop / Hold		Menu		Menu / Home
	4		4		Left		Left
	5		5		Vol-		Vol-
	6		6		OK		OK
	Sub		Subtitle / EQ		Right		Right
	Update		D.Menu / Top		Vol+		Vol+
	7		7		Swap		Back / Return
	8		8		P-		CH- / Page-
	9		9		Down		Down
	Mix		Text / Goto		16:9		Picture / Format





Original		Recharge		Original	Recharge
	Red		Red / Netflix / Search		
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		
	Violet		Smart / List		
	[ ]		Setup / OPT /		
	♪		Sound / Title		
	PP		+  Shift + Smart / List		

