



Original		Rechange		Original		Rechange	
	P100		Display / Media		AV		AV / Input / RDS
	Power		Power		0		0
	REV		<< / Tune-		-/--		Guide / EPG / -/--
	Doub		Audio / Lang I/II		P+		CH+ / Page+
	1		1		Up		Up
	2		2		Mute		Mute / Dimmer
	3		3		TV/TXT		TV/Radio /
	Hold		Stop / Hold		Menu		Menu / Home
	4		4		Left		Left
	5		5		Vol-		Vol-
	6		6		OK		OK
	Sub		Subtitle / EQ		Right		Right
	Update		D.Menu / Top		Vol+		Vol+
	7		7		Swap		Back / Return
	8		8		P-		CH- / Page-
	9		9		Down		Down
	Mix		Text / Goto		16:9		Picture / Format





	Original	Recharge	Original	Recharge
	Red	Red / Netflix / Search		
	Green	Green / APP / Repeat		
	Yellow	Yellow / YouTube / Repeat		
	Blue	Blue / Prime Video / Random		
	Violet	Smart / List		
	[ ]	Setup / OPT /		
	♪	Sound / Title		
	PP	+  Shift + Smart / List		

