


 








 

 
 
 
 

 


 
 
 

 
 
 

 

 
 


 

 

 

 



 
 


 
 
 

 
 












 


 



 


 
 
 
 
 




 


 
 








Original		Recharge		Original		Recharge	
	Power		Power		i		Info
	AV		AV		P+		Ch +
	1		1		P-		Ch -
	2		2		Menu		Menu
	3		3		Exit		Exit
	4		4		Option		Options
	5		5		Back/Return		Back
	6		6		Up		Up
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0		0		OK		Ok
	Still		Format		TV		TV/R
	Recall		Pre Ch		Media		Media
	Vol+		Vol +		Guide		Guide
	Vol-		Vol -		[+]		3D
	Mute		Mute		Timer		Shift + AV





Original	Recharge	Original	Recharge
 Text	 Text		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Audio	 Dual		
 STTL	 Subt		
 Sound	 Shift + Dual		
 <<	 <<		
 Pause	 Pause		
 >>	 >>		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

