 



 
 



 



 
 

 
 





 

 

 






 


 


 


 

 

 
 
 
 
 






 
 
 


 



 




Original		Rechange		Original		Rechange	
	Power		Power		P+		Ch +
	1		1		P-		Ch -
	2		2		[≡i]/Menu		Menu
	3		3		Ω		Smart
	4		4		[≡?]/Info		Info
	5		5		Exit		Exit
	6		6		Enter		Ok
	7		7		Up		Up
	8		8		Down		Down
	9		9		Right		Right
	0		0		Left		Left
	-/--/[≡+]		Guide		[≡]/[≡]/TTX/MIX		Text
	Recall/Auto/PRE-C		Pre Ch		[≡o]		Subt
	Mute		Mute		[≡◆]		Format
	[≡.]/Source		AV		[≡◇]/Sleep		Sleep
	Vol+		Vol +		Red		Red
	Vol-		Vol -		Green		Green



