
 

 



 

 

 



 


 




 



 






 
















 
 





 











Original	Rechange	Original	Rechange
 Power	 Power	 P+	 CH+ / Page+
 Mute	 Mute / Dimmer	 Vol-	 Vol-
 1	 1	 P-	 CH- / Page-
 2	 2	 Up	 Up
 3	 3	 Left	 Left
 4	 4	 OK	 OK
 5	 5	 Right	 Right
 6	 6	 LCD Menu	 Shift + D.Menu / Top Menu
 7	 7	 Down	 Down
 8	 8	 DVB Menu	 D.Menu / Top
 9	 9	 Input	 AV / Input / RDS
 -/--	 Guide / EPG / -/--	 P.Mode	 Picture / Format
 0	 0	 S.Mode	 Sound / Title
 Recall	 Back / Return	 Sleep	 Sleep / Timer
 Vol+	 Vol+	 Info/Display	 Info / Angle
 Audio/Audio/Lang/ MTS	 Audio / Lang I/II	 Zoom/P.Ratio	 Zoom / Size
 Exit/Exit	 Exit / Cancel / Clear	 Tv/Radio	 TV/Radio /



