



Original		Rechange		Original		Rechange	
	Power		Power		P+		CH+ / Page+
	Mute		Mute / Dimmer		Vol-		Vol-
	1		1		P-		CH- / Page-
	2		2		Up		Up
	3		3		Left		Left
	4		4		OK		OK
	5		5		Right		Right
	6		6		LCD Menu		Shift + D.Menu / Top Menu
	7		7		Down		Down
	8		8		DVB Menu		D.Menu / Top
	9		9		Input		AV / Input / RDS
	-/--		Guide / EPG / -/--		P.Mode		Picture / Format
	0		0		S.Mode		Sound / Title
	Recall		Back / Return		Sleep		Sleep / Timer
	Vol+		Vol+		Info/Display		Info / Angle
	Audio/Audio/Lang/MTS		Audio / Lang I/II		Zoom/P.Ratio		Zoom / Size
	Exit/Exit		Exit / Cancel / Clear		Tv/Radio		TV/Radio /



