

 

 

 




 
 














 





 




Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Guide / EPG / -/--
 0	 0
 Recall	 Back / Return
 Vol+	 Vol+
 Audio/Audio/Lang/ MTS	 Audio / Lang I/II
 Exit/Exit	 Exit / Cancel / Clear

Original	Rechange
 P+	 CH+ / Page+
 Vol-	 Vol-
 P-	 CH- / Page-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 LCD Menu	 Shift + D.Menu / Top Menu
 Down	 Down
 DVB Menu	 D.Menu / Top
 Input	 AV / Input / RDS
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer
 Info/Display	 Info / Angle
 Zoom/P.Ratio	 Zoom / Size
 Tv/Radio	 TV/Radio /



