



Original		Recharge		Original		Recharge	
	Power		Power		6		6
	Mute		Mute		7		7
	[<>]		Format		8		8
	♪		Dual		9		9
	[ ]		3D		0		0
	PAT		Smart		Zoom		Eject
	PIP Sel		Play		Swap		Pre Ch
	PIP Pos		Pause		Swap		Back
	PIP Size		Stop		PR-		Ch -
	AV		AV		PR+		Ch +
	PC		Media		Vol-		Vol -
	TV		TV/R		Vol+		Vol +
	1		1		Up		Up
	2		2		Right		Right
	3		3		Down		Down
	4		4		Left		Left
	5		5		OK / Freeze		Ok





Original		Recharge		Original	Recharge
	Info		Info		
	Menu		Menu		
	[+]		Options		
	[?]		D. Menu		
	[♦]		Subt		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	Text / Mix		Text		
	[≡x]		Exit		
	[≡:]		Guide		

