






 

 

 



 







 





 

 



 


 



 


 







 


 
 
 
 
 
 

 



 




Original	Rechange
	 Power
	 Source
	 TV/R
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Text
	 Info
	 Menu
	 Format

Original	Rechange
	 Dual
	 Ch +
	 Ch -
	 Up
	 Down
	 Right
	 Left
	 Vol +
	 Vol -
	 Media
	 Mute
	 Exit
	 Shift + Dual
	 Subt
	 Options
	 Eject
	 Ok





Original	Rechange
CVBS1	+ Shift + 1
CVBS2	+ Shift + 2
CVBS3	+ Shift + 3
Y Pb Pr	+ Shift + 4
YC1	+ Shift + 5
YC2	+ Shift + 6
PC	PRE-CH Pre Ch
HDMI	Smart
[≡?] / MTS	List
[≡] / Sleep	Sleep
[≡i] / Time	3D
[≡] / PREPG	Guide
Red / Delete	Red
Green / Skip	Green
Yellow / Insert	Yellow
Blue / Replace	Blue

Original	Rechange

