



Original		Recharge		Original		Recharge	
	Power		Power		FAV-		Shift + Ch -
	Mute		Mute		P.Mode		Media
	1		1		S.Mode		Options
	2		2		CH+		Ch +
	3		3		CH-		Ch -
	4		4		Vol+		Vol +
	5		5		Vol-		Vol -
	6		6		Input		AV
	7		7		Sleep		Sleep
	8		8		Aspect		3D
	9		9		Info		Info
	0		0		Menu		Menu
	-/--		Shift + Guide		Exit		Exit
	Recall		Back		Up		Up
	Audio		Dual		Down		Down
	FAV		Pre Ch		Right		Right
	FAV+		Shift + Ch +		Left		Left





Original		Rechange		Original		Rechange	
	OK		Ok		Yellow		Yellow
	Text		Text		Blue		Blue
	Index		Smart				
	Play/Mix/T		Play				
	Pause		Pause				
	Stop/Reveal		Stop				
	<</Hold		<<				
	>>/Subpage		>>				
	I<<		I<<				
	>>I/Cancel		>>I				
	Rec		Rec				
	Size		Format				
	EPG		Guide				
	Tv/Radio		TV/R				
	Sub-T		Subt				
	Red		Red				
	Green		Green				

